

**Aerobiology Sample Report**

1234 Mold Ave.

Spores, Conidiophores 12345

Attn: Fifth Kingdom

 Project: **GdcfYfUd'GUa d'YFYdcfh!'@bXgWUdY**

Condition of Sample(s) Upon Receipt: Acceptable

Date Collected: 04/29/2015

Date Received: 04/30/2015

Date Analyzed: 05/04/2015

Date Reported: 05/05/2015

Project ID: 15000000

Page 1 of 3

## 1054 Spore Trap Analysis: SOP 3.8

Client Sample Number	N-1				N-2				N-3				N-4			
Sample Location	Room 3D-140-Cubicle 36-3D-140-09				Room 3D-140-Cubicle 36-3D-140-42				Room 3D-140-Cubicle 36-3D-140-36				Room 3D-148 Near Column 3D-D4			
Sample Volume (L)	90				90				90				90			
Lab Sample Number	15008315-001				15008315-002				15008315-003				15008315-004			
Spore Identification	Raw Ct	spr/m <sup>3</sup>	% Ttl	In/Out	Raw Ct	spr/m <sup>3</sup>	% Ttl	In/Out	Raw Ct	spr/m <sup>3</sup>	% Ttl	In/Out	Raw Ct	spr/m <sup>3</sup>	% Ttl	In/Out
ascospores	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
basidiospores	-	-	-	-	1	11	14	-	-	-	-	-	-	-	-	-
Cladosporium	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Epicoccum	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
hyphal elements	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Penicillium/Aspergillus group	7	78	100	-	5	56	71	-	-	-	-	-	1	11	100	-
Smuts,Periconia,Myxomycetes	-	-	-	-	1	11	14	-	-	-	-	-	-	-	-	-
	Debris Rating 3				Debris Rating 3				Debris Rating 3				Debris Rating 3			
Analytical Sensitivity	Analytical Sensitivity: 11 spr/m <sup>3</sup>				Analytical Sensitivity: 11 spr/m <sup>3</sup>				Analytical Sensitivity: 11 spr/m <sup>3</sup>				Analytical Sensitivity: 11 spr/m <sup>3</sup>			
Comments	Insects: ND, Particles: Many, Fibers: Few				Insects: ND, Particles: Many, Fibers: Few				Insects: ND, Particles: Many, Fibers: Present. No fungal spores seen.				Insects: ND, Particles: Many, Fibers: Few			
Total *See Footnotes	7	78	~100%	-	7	78	~100%	-	0	0	-	-	1	11	~100%	-

**Aerobiology Sample Report**

1234 Mold Ave.

Spores, Conidiophores 12345

Attn: Fifth Kingdom

Project: **GdcfYfUd'GUa d'YFYdcfh!'@bXgWUdY**

Condition of Sample(s) Upon Receipt: Acceptable

Date Collected: 04/29/2015

Date Received: 04/30/2015

Date Analyzed: 05/04/2015

Date Reported: 05/05/2015

Project ID: 15000000

Page 2 of 3

Client Sample Number	N-5				N-6			
Sample Location	Outdoors - Patio Area				Outdoors - Parking Lot			
Sample Volume (L)	90				90			
Lab Sample Number	15008315-005				15008315-006			
Spore Identification	Raw Ct	spr/m <sup>3</sup>	% Ttl	In/Out	Raw Ct	spr/m <sup>3</sup>	% Ttl	In/Out
ascospores	14	156	5	-	18	200	16	-
basidiospores	19	844	29	-	17	756	59	-
Cladosporium	42	467	16	-	24	267	21	-
Epicoccum	5	56	2	-	-	-	-	-
hyphal elements	8	89	3	-	2	22	2	-
Penicillium/Aspergillus group	11	122	4	-	1	11	1	-
Smuts,Periconia,Myxomycetes	105	1167	40	-	3	33	3	-
	Debris Rating <b>3</b>				Debris Rating <b>3</b>			
Analytical Sensitivity	Analytical Sensitivity: <b>11 spr/m<sup>3</sup></b>				Analytical Sensitivity: <b>11 spr/m<sup>3</sup></b>			
Comments	Insects: ND, Particles: Many, Fibers: Present				Insects: ND, Particles: Many, Fibers: ND			
Total *See Footnotes	204	2900	~100%	-	65	1289	~100%	-

Aerobiology Sample Report  
 1234 Mold Ave.  
 Spores, Conidiophores 12345  
 Attn: Fifth Kingdom  
 Project: **GdcfYffUd'GUa d`YFYdcfh!'@bXgWUdY**  
 Condition of Sample(s) Upon Receipt: Acceptable

Date Collected: 04/29/2015  
 Date Received: 04/30/2015  
 Date Analyzed: 05/04/2015  
 Date Reported: 05/05/2015  
 Project ID: 15000000

Page 3 of 3

**Footnotes and Additional Report Information**


**Debris Rating Table**

1	Minimal (<5%) particulate present	Reported values are minimally affected by particulate load.
2	5% to 25% of the trace occluded with particulate	Negative bias is expected. The degree of bias increases directly with the percent of the trace that is occluded.
3	26% to 75% of the trace occluded with particulate	Negative bias is expected. The degree of bias increases directly with the percent of the trace that is occluded.
4	75% to 90% of the trace occluded with particulate	Negative bias is expected. The degree of bias increases directly with the percent of the trace that is occluded.
5	Greater than 90% of the trace occluded with particulate	Quantification not possible due to large negative bias. A new sample should be collected at a shorter time interval or other measures taken to reduce particulate load.

1. Penicillium/Aspergillus group spores are characterized by their small size, round to ovoid shape, being unicellular, and usually colorless to lightly pigmented. There are numerous genera of fungi whose spore morphology is similar to that of the Penicillium/Aspergillus type. Two common examples would be Paecilomyces and Acremonium. Although the majority of spores placed in this group are Penicillium, Aspergillus, or a combination of both. Keep in mind that these are not the only two possibilities.
2. Ascospores are sexually produced fungal spores formed within an ascus. An ascus is a sac-like structure designed to discharge the ascospores into the environment, e.g. Ascobolus.
3. Basidiospores are typically blown indoors from outdoors and rarely have an indoor source. However, in certain situations a high basidiospore count indoors may be indicative of a wood decay problem or wet soil.
4. The Smut, Periconia, Myxomycete group is composed of three different groups whose spores have similar morphologies. Smuts are plant pathogens, Periconia is a relatively uncommon mold indoors, and Myxomycetes are not fungi but slime molds. Although these organisms do not typically proliferate indoors, their spores are potentially allergenic.
5. The colorless group contains colorless spores which were unidentifiable to a specific genus. Examples of this group include Acremonium, Aphanocladium, Beauveria, Chrysosporium, Engyodontium microconidia, yeast, some arthrospores, as well as many others.
6. Hyphae are the vegetative mode of fungi. Hyphal elements are fragments of individual Hyphae. They can break apart and become airborne much like spores and are potentially allergenic. A mass of hyphal elements is termed the mycelium. Hyphae in high concentration may be indicative of colonization.
7. Dash (-) in this report, under raw count column means 'not detected (ND)'; otherwise 'not applicable' (NA).
8. The positive-hole correction factor is a statistical tool which calculates a probable count from the raw count, taking into consideration that multiple particles can impact on the same hole; for this reason the sum of the calculated counts may be less than the positive hole corrected total.
9. Due to rounding totals may not equal 100%.
10. Minimum Reporting Limits (MRL) for BULKs, DUSTS, SWABS, and WATER samples are a calculation based on the sample size and the dilution plate on which the organism was counted. Results are a compilation of counts taken from multiple dilutions and multiple medias. This means that every genus of fungi or bacteria recovered can be counted on the plate on which it is best represented.
11. If the final quantitative result is corrected for contamination based on the blank, the blank correction is stated in the sample comments section of the report.
12. Analysis conducted on non-viable spore traps is completed using Indoor Environmental Standards Organization (IESO) Standard 2210.
13. The results in this report are related to this project and these samples only.
14. For samples with an air volume of < 100L, the number of significant figures in the result should be considered (2) two. For samples with air volumes between 100-999L, the number of significant figures in the result should be considered (3) three. For example, a sample with a result of 55,443 spr/m<sup>3</sup> from a 75L sample using significant figures should be considered 55,000. The same result of 55,443 from a 150L sample using significant figures should be considered 55,400 spr/m<sup>3</sup>.
15. If the In/Out ratio is greater than 100 times it is indicated >100/1, rather than showing the real value.

**Terminology Used in Direct Exam Reporting**

**Conidiophores are a type of modified hyphae from which spores are born. When seen on a surface sample in moderate to numerous concentrations they may be indicative of fungal growth.**

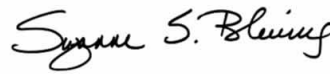

Suzanne S. Blevins, B.S., SM (ASCP)  
 Laboratory Director